

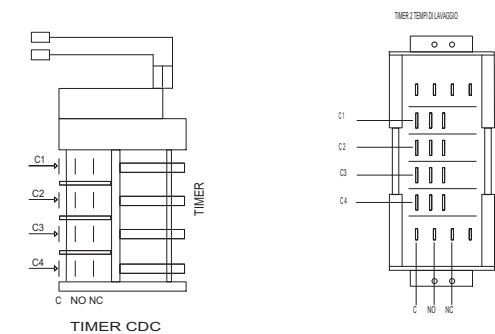


* OPTIONAL

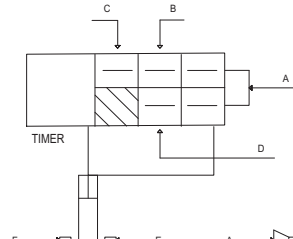


REV. 03	REV./DATE 09/03/04	IMPIANTO / INSTALLATION SCHEMA ELET.LAVASTOVIGLIE	TITOLO / TITLE SCHEMA FUNZIONALE / ELECTRICAL DIAGRAM	N. DIS. 40921-03.DWG N. ARCH. CI-40921-03	FOGLIO PAGE 1	SEGUE FOLLOWS 2
		220-240V 1P+N 50/60Hz	COD.DOC. 40921	DATA EMISSIONE / DATE 03/08/99	TOT. FOGLI TOT. PAGE 2	

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	
A		C	=	CONDENSATORE	CONDENSER	CONDENSEUR	KONDENSATEUR										MARRONE	BROWN	MARON	BRAUN	
		PL	=	POMPA LAVAGGIO	WASH PUMP	POMPE LAVAGE	WASCHPUMPE										CELESTE	BLUE	BLEU-CLAIR	HELL BLAU	
		DDE	=	DOSATORE DETERSIVO ELETTRICO	ELECTRIC DETERGENT PUMP	DOSEUR ELETRIQUE DETERGENT	DOSIERGERÄT										NERO	BLACK	NOIR	SCHARZ	
		PS	=	POMPA SCARICO	DRAIN PUMP	POMPE DE VIDANGE	LAUGENPUMPE										ROSSO	RED	ROUGE	ROT	
		PAP	=	POMPA AUMENTO PRESSIONE	BOOSTER PUMP	SURPRESSEUR	DRUCKERHOHUNGSPUMPE (ALS ZUBEHOR)										VERDE	GREEN	VERT	GRUN	
		ELC	=	ELETTROVALVOLA RISCIAQUO CALDO	RINSE HOT WATER SOLENOID VALVE	ELECTROSOUPAPE RINÇAGE CHAUD	WARMWASSER-MAGNETVENTIL										BIANCO	WHITE	BLANC	WEISS	
		ELF	=	ELETTROVALVOLA RISCIAQUO FREDDO	RINSE COLD WATER SOLENOID VALVE	ELECTROSOUPAPE RINÇAGE FROID	KALTWASSER-MAGNETVENTIL										GRIGIO	GREY	GRIS	GRAU	
		ELR	=	ELETTROVALVOLA RIGENERAZIONE	REGENERATION SOLENOID VALVE	ELECTROSOUPAPE REGENERATION	REGENERIERUNGSMAGNETVENTIL										ARANCIO	ORANGE	ORANGE	ORANGE	
		ELCR	=	ELETTROVALVOLA CARICO	LOAD SOLENOID VALVE	ELECTROSOUPAPE CHARGEMENT	ZUFLUSS-MAGNETVENTIL										VIOLA	VIOLET	VIOLET	VIOLET	
		ELSC	=	ELETTROVALVOLA SCARICO	DRAIN SOLENOID VALVE	ELECTROSOUPAPE VIDANGE	ENTLEERUNGSMAGNETVENTIL										BLU	BLEU	BLEU	BLAU	
	B		ST	=	SPIA TEMPERATURA	TEMPERATURE LIGHT	VOYANT TEMPERATURE	TEMPERATURSLEUCHE													
			SC	=	SPIA CICLO	CYCLE LIGHT	VOYANT CYCLE	BETRIEBSLEUCHE													
	C		SPR	=	SPIA RIGENERAZIONE	REGENERATION CYCLE LIGHT	VOYANT REGENERATION	REGENERIERUNGSLEUCHE													
			SR	=	SPIA RETE	MAIN SWITCH LIGHT	VOYANT RESEAU ELECTRIQUE	NETZEWIRKSLEUCHE													
	D		SA	=	SPIA ALLARME	ALARM WARNING LIGHT	VOYANT ALARME	ALARM-ANZEIGER													
			SV	=	SPIA VASCA	TANK LEVEL LIGHT	VOYANT NIVEAU CUVE	TANKWASSERNIVEAULAMPE													
E		RB	=	RESISTENZA BOILER	BOILER HEATING ELEMENT	RESISTANCE SURCHAUFFEUR	BOILERHEIZUNG														
		RV	=	RESISTENZA VASCA	TANK HEATING ELEMENT	RESISTANCE CUVE	TANKHEIZUNG														
F		IG	=	INTERRUTTORE GENERALE	MAIN SWITCH	INTERRUPTEUR GENERAL	HAUPTSCHALTER														
		IGD	=	INTERRUTTORE GENERALE STAND BY	STAND BY MAIN SWITCH	INTERUPTEUR GENERAL STAND BY	HAUPTSCHALTER STAND BY														
G		MPC	=	MICRO PORTA Contatto	DOOR SECURITY SWITCH	MICRO SECURITE PORTE	MIKROTÜRKONTAKT														
		MPM	=	MICRO PORTA Magnetico	MAGNETIC DOOR SECURITY SWITCH	MICRO SECURITE PORTE MAGNETIQUE	MAGNETISCHE SICHERHEITSMIKROTUR														
H		PPS	=	PULSANTE POMPA SCARICO	DRAIN PUMP SWITCH	BOUTON POMPE DE VIDANGE	ENTLEERUNGSPUMPE-SCHALTER														
		PR	=	PRESSOSTATO	PRESSURE SWITCH	PRESSOSTAT	DRUCKWÄCHTER														
I		PC	=	PULSANTE CICLO	CYCLE SWITCH	BOUTON DEMARREUR	TASTSCHALTER F.PROGRAMMANFLAU														
		PCR	=	PULSANTE CICLO RIGENERAZIONE	REGENERATION CYCLE SWITCH	VOYANT REGENERATION	REGENERIERUNGSBETRIEBSLEUCHE														
J		PRF	=	PULSANTE RISCIAQUO FREDDO	RINSE COLD WATER SWITCH	BOUTON DE RINCAGE FROID	KALTESPUHLUNG SCHALTER														
		PCI	=	PULSANTE CICLO INFINITO	UNLIMITED CYCLE PUSH BUTTON	BOUTON CYCLE SANS ARRET	PAUSELOS ZYKLUSKNOPF														
K		PPG	=	PULSANTE PROGRAMMAZIONE	PROGRAMMATION SWITCH	BOUTON PROGRAMMATION	PROGRAMMSCHALTER														
		DEVA/M	=	DEV. AUTOMATICO/MANUALE	AUTOMATIC/MANUAL SWITCH	SELECTEUR AUTOMATIQUE/MANUAL	AUTOMATISCHER/MANUAL WAHLER														
L		DEVCF	=	DEV. RISCIAQUO CALDO/FREDDO	HOT/COLD RINSING SWITCH	COMM. DE RINCAGE CHAUD/FROID	UMSCHALTER F.KALT WARMWASSER														
		TSP	=	TERMOSTATO SICUREZZA POMPA	PUMP SECURITY THERMOSTAT	THERMOSTAT SECURITE POMPE	SICHERUNGSTHERMOSTAT DER PUMPE														
M		TV	=	TERMOSTATO VASCA	TANK THERMOSTAT	THERMOSTAT CUVE	TANKTHERMOSTAT														
		TB	=	TERMOSTATO BOILER	BOILER THERMOSTAT	THERMOSTAT SURCHAUFFEUR	BOIERTHERMOSTAT														
N		TS	=	TERMOSTATO SICUREZZA	SECURITY THERMOSTAT	THERMOSTAT DE SECURITE	SICHERHEITSTHERMOSTAT														
		MTz	=	TIMER CICLO	CYCLE TIMER	PROGRAMMATEUR DU CYCLE	ZYKLUSTIMER														
O		MTzR	=	MOTORE TIMER RIGENERAZIONE	REGENERATION CYCLE MOTOR	MOTEUR DU RIGENERATION	SINCHRONMOT.F.REGENERIERUNGS TIMER														
		MTz(L)	=	MOTORE LENTO (MTz)	SLOW (MTz)	(MTz) LENT	LANGSAMER MOTOR														
P		MTz(V)	=	MOTORE VELOCE (MTz)	FAST (MTz)	(MTz) RAPIDE	SCHNELLER MOTOR														
		MT5	=	CONTATTORE TIMER BOBINA	CONTACTOR TIMER	CONTACTEUR DU PROGRAMMATEUR	NT5 SCHALTERKONTAKT														
Q		TLR	=	TELERUTTORE RESISTENZA	HEATING ELEMENT CONTACTOR	TELERUPTEUR RESISTANCE	HEIZUNGFERNSCHALTER-SCHÜTZ														
		TLPAP	=	TELERUTTORE PAP	BOOSTER PUMP CONTACTOR	TELERUPTEUR SURPRESSEUR	FERNSCHALTER-SCHÜTZ														
R		TLP	=	TELERUTTORE POMPA	PUMP CONTACTOR	TELERUPTEUR POMPE	PUMPFERNASCHALTER-SCHÜTZ														
		TLB	=	TELERUTTORE BOILER	BOILER CONTACTOR	TELERUPTEUR SURCHAUFFEUR	BOILERFERNASCHALTER-SCHÜTZ														
S		TLV	=	TELERUTTORE VASCA	TANK CONTACTOR	TELERUPTEUR CUVE	TANKFERNASCHALTER-SCHÜTZ														
		RLn	=	RELE'	RELAY	RELAIS	RELAIS														
T		TPS	=	TIMER POMPA SCARICO	DRAIN PUMP TIMER	PROGRAMMATEUR POMPE DE VIDAGE	LAUGENPUMPE TIMER														
		RM	=	RELE' TERMICO	THERMIC RELAY	RELAIS TERMIQUE	THERMISCH RELAIS														
U		BL	=	BLOCCO PORTA	DOOR LOCK	SERRAGE PORTE	TÜRSPERRE														



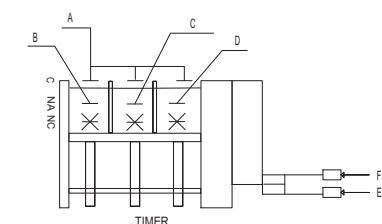


REV.	REV.DATE	IMPIANTO / INSTALLATION	TITOLO / TITLE	N. DIS.	FOGLIO	SEGUE
03	09/03/04	SCHEMA ELET.LAVASTOVIGLIE	LEGENDA SIGLE / LEGEND	40921-03.DWG	PAGE	FOLLOWS
		220-240V 1P+N 50/60Hz	COD.DOC.	N. ARCH. CI-40921-03	2	
			40921	DATA EMISSIONE / DATE	TOT. FOGLI	TOT. PAGE
				03/08/99	2	2

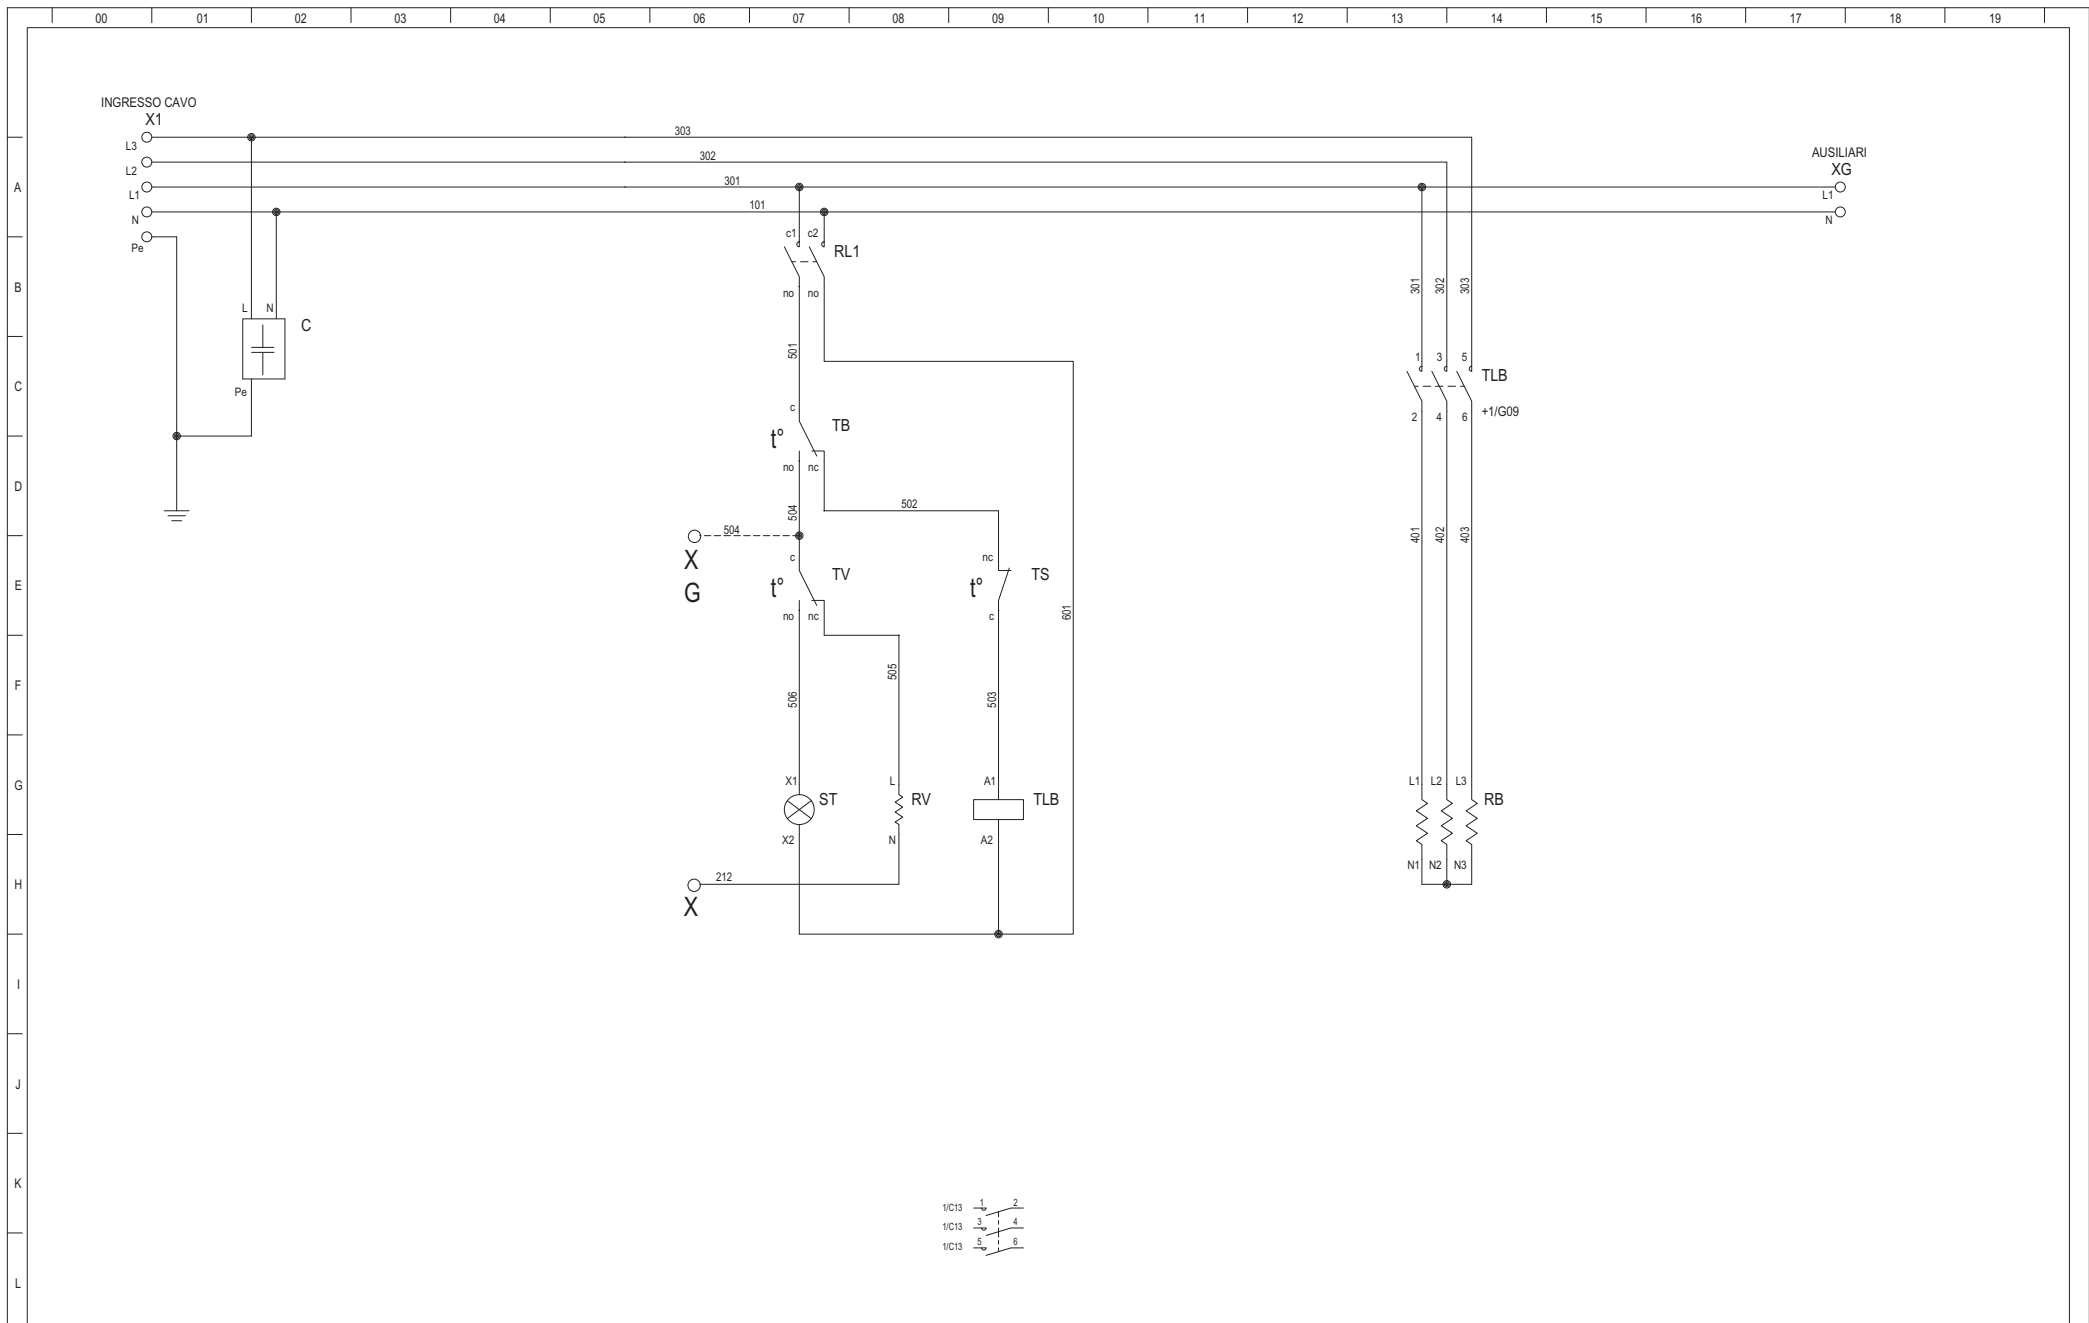

REV. 03	REV./DATE 09/03/04	IMPIANTO / INSTALLATION SCHEMA ELET.LAVASTOVIGLIE			TITOLO / TITLE SCHEMA DI POTENZA / POWER ELECTRICAL DIAGRAM		N. DIS. 40906-03.DWG	FOGLIO PAGE 1	SEGUE FOLLOWS 2
		380-415V 3P+N 50/60Hz			COD.DOC. 40906		N. ARCH. CI-40906-03	DATA EMISSIONE / DATE 18/12/97	TOT. FOGLI TOT. PAGE 2

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	
A	C	=	CONDENSATORE		CONDENSER		CONDENSEUR		KONDENSATEUR								MARRONE	BROWN	MARON	BRAUN	
	PL	=	POMPA LAVAGGIO		WASH PUMP		POMPE LAVAGE		WASCHPUMPE								CELESTE	BLUE	BLEU-CLAIR	HELL BLAU	
	DDE	=	DOSATORE DETERSIVO ELETTRICO		ELECTRIC DETERGENT PUMP		DOSEUR ELETRIQUE DETERGENT		DOSIERGERÄT								NERO	BLACK	NOIR	SCHARZ	
	PS	=	POMPA SCARICO		DRAIN PUMP		POMPE DE VIDANGE		LAUGENPUMPE								ROSSO	RED	ROUGE	ROT	
	PAP	=	POMPA AUMENTO PRESSIONE		BOOSTER PUMP		SURPRESSEUR		DRUCKERHOHUNGSPUMPE (ALS ZUBEHOR)								VERDE	GREEN	VERT	GRUN	
	ELC	=	ELETTROVALVOLA RISCIAQUO CALDO		RINSE HOT WATER SOLENOID VALVE		ELECTROSOUPAPE RINÇAGE CHAUD		WARMWASSER-MAGNETVENTIL								BIANCO	WHITE	BLANC	WEISS	
	ELF	=	ELETTROVALVOLA RISCIAQUO FREDDO		RINSE COLD WATER SOLENOID VALVE		ELECTROSOUPAPE RINÇAGE FROID		KALTWASSER-MAGNETVENTIL								GRIGIO	GREY	GRIS	GRAU	
	ELR	=	ELETTROVALVOLA RIGENERAZIONE		REGENERATION SOLENOID VALVE		ELECTROSOUPAPE REGENERATION		REGENERIERUNGSMAGNETVENTIL								ARANCIO	ORANGE	ORANGE	ORANGE	
	ELCR	=	ELETTROVALVOLA CARICO		LOAD SOLENOID VALVE		ELECTROSOUPAPE CHARGEMENT		ZUFLUSS-MAGNETVENTIL								VIOLA	VIOLET	VIOLET	VIOLET	
	ELSC	=	ELETTROVALVOLA SCARICO		DRAIN SOLENOID VALVE		ELECTROSOUPAPE VIDANGE		ENTLEERUNGSMAGNETVENTIL								BLU	BLEU	BLEU	BLAU	
	B	ST	=	SPIA TEMPERATURA		TEMPERATURE LIGHT		VOYANT TEMPERATURE		TEMPERATURSLEUCHTE											
		SC	=	SPIA CICLO		CYCLE LIGHT		VOYANT CYCLE		BETRIEBSLEUCHTE											
		SPR	=	SPIA RIGENERAZIONE		REGENERATION CYCLE LIGHT		VOYANT REGENERATION		REGENERIERUNGSLAUCHTE											
	C	SR	=	SPIA RETE		MAIN SWITCH LIGHT		VOYANT RESEAU ELECTRIQUE		NETZEWKRSLEUCHTE											
		SA	=	SPIA ALLARME		ALARM WARNING LIGHT		VOYANT ALARME		ALARM-ANZEIGER											
D	SV	=	SPIA VASCA		TANK LEVEL LIGHT		VOYANT NIVEAU CUVE		TANKWASSERNIVEAULAMPE												
	RB	=	RESISTENZA BOILER		BOILER HEATING ELEMENT		RESISTANCE SURCHAUFFEUR		BOILERHEIZUNG												
E	RV	=	RESISTENZA VASCA		TANK HEATING ELEMENT		RESISTANCE CUVE		TANKHEIZUNG												
	IG	=	INTERRUTTORE GENERALE		MAIN SWITCH		INTERRUPTEUR GENERAL		HAUPTSCHALTER												
F	IGD	=	INTERRUTTORE GENERALE STAND BY		STAND BY MAIN SWITCH		INTERUPTEUR GENERAL STAND BY		HAUPTSCHALTER STAND BY												
	MPC	=	MICRO PORTA Contatto		DOOR SECURITY SWITCH		MICRO SECURITE PORTE		MIKROTÜRKONTAKT												
G	MPM	=	MICRO PORTA Magnetico		MAGNETIC DOOR SECURITY SWITCH		MICRO SECURITE PORTE MAGNETIQUE		MAGNETISCHE SICHERHEITSMIKROTUR												
	PPS	=	PULSANTE POMPA SCARICO		DRAIN PUMP SWITCH		BOUTON POMPE DE VIDANGE		ENTLEERUNGSPUMPE-SCHALTER												
H	PR	=	PRESSOSTATO		PRESSURE SWITCH		PRESSOSTAT		DRUCKWÄCHTER												
	PC	=	PULSANTE CICLO		CYCLE SWITCH		BOUTON DEMARREUR		TASTSCHALTER F.PROGRAMMANFLAU												
I	PCR	=	PULSANTE CICLO RIGENERAZIONE		REGENERATION CYCLE SWITCH		VOYANT REGENERATION		REGENERIERUNGSBETRIEBSLEUCHTE												
	PRF	=	PULSANTE RISCIAQUO FREDDO		RINSE COLD WATER SWITCH		BOUTON DE RINCAGE FROID		KALTESPUHLUNG SCHALTER												
J	PCI	=	PULSANTE CICLO INFINITO		UNLIMITED CYCLE PUSH BUTTON		BOUTON CYCLE SANS ARRET		PAUSENLOS ZYKLUSKNOPF												
	PPG	=	PULSANTE PROGRAMMAZIONE		PROGRAMMATION SWITCH		BOUTON PROGRAMMATION		PROGRAMMSCHALTER												
K	DEVAM	=	DEV. AUTOMATICO/MANUALE		AUTOMATIC/MANUAL SWITCH		SELECTEUR AUTOMATIQUE/MANUAL		AUTOMATISCHER/MANUAL WAHLER												
	DEVCF	=	DEV. RISCIAQUO CALDO/FREDDO		HOT/COLD RINSING SWITCH		COMM. DE RINCAGE CHAUD/FROID		UMSCHALTER F.KALT WARMWASSER												
L	TSP	=	TERMOSTATO SICUREZZA POMPA		PUMP SECURITY THERMOSTAT		THERMOSTAT SECURITE POMPE		SICHERUNGSTERMOSTAT DER PUMPE												
	TV	=	TERMOSTATO VASCA		TANK THERMOSTAT		THERMOSTAT CUVE		TANKTHERMOSTAT												
M	TB	=	TERMOSTATO BOILER		BOILER THERMOSTAT		THERMOSTAT SURCHAUFFEUR		BOIERTHERMOSTAT												
	TS	=	TERMOSTATO SICUREZZA		SECURITY THERMOSTAT		THERMOSTAT DE SECURITE		SICHERHEITSTERMOSTAT												
N	MTz	=	TIMER CICLO		CYCLE TIMER		PROGRAMMATEUR DU CYCLE		ZYKLUSTIMER												
	MTzR	=	MOTORE TIMER RIGENERAZIONE		REGENERATION CYCLE MOTOR		MOTEUR DU RIGENERATION		SINCHRONMOT.F.REGENERIERUNGS TIMER												
O	MTz(L)	=	MOTORE LENTO (MTz)		SLOW (MTz)		(MTz) LENT		LANGSAMER MOTOR												
	MTz(V)	=	MOTORE VELOCE (MTz)		FAST (MTz)		(MTz) RAPIDE		SCHNELLER MOTOR												
P	MT5	=	CONTATTORE TIMER BOBINA		CONTACTOR TIMER		CONTACTEUR DU PROGRAMMATEUR		NT5 SCHALTERKONTAKT												
	TLR	=	TELERUTTORE RESISTENZA		HEATING ELEMENT CONTACTOR		TELERUPTEUR RESISTANCE		HEIZUNGFERNSCHALTER-SCHÜTZ												
Q	TLPAP	=	TELERUTTORE PAP		BOOSTER PUMP CONTACTOR		TELERUPTEUR SURPRESSEUR		FERNSCHALTER-SCHÜTZ												
	TLP	=	TELERUTTORE POMPA		PUMP CONTACTOR		TELERUPTEUR POMPE		PUMPEFERNASCHALTER-SCHÜTZ												
R	TLB	=	TELERUTTORE BOILER		BOILER CONTACTOR		TELERUPTEUR SURCHAUFFEUR		BOILERFERNASCHALTER-SCHÜTZ												
	TLV	=	TELERUTTORE VASCA		TANK CONTACTOR		TELERUPTEUR CUVE		TANKFERNASCHALTER-SCHÜTZ												
S	RLn	=	RELE'		RELAY		RELAIS		RELAIS												
	TPS	=	TIMER POMPA SCARICO		DRAIN PUMP TIMER		PROGRAMMATEUR POMPE DE VIDAGE		LAUGENPUMPE TIMER												
T	RM	=	RELE' TERMICO		THERMIC RELAY		RELAIS TERMIQUE		THERMISCH RELAIS												
	BL	=	BLOCCO PORTA		DOOR LOCK		SERRAGE PORTE		TÜRSPERRE												

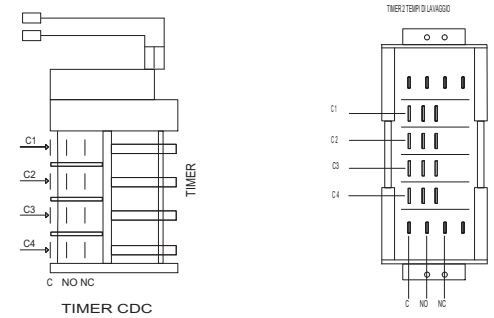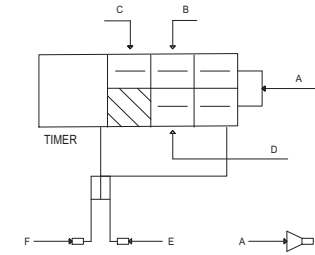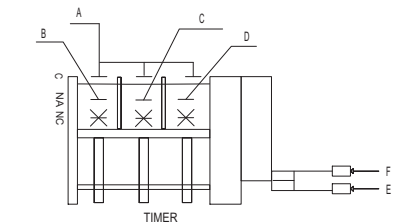

REV.	REV./DATE	IMPIANTO / INSTALLATION	TITOLO / TITLE	N. DIS.	FOGLIO	SEGUE
03	09/03/04	SCHEMA ELET.LAVASTOVIGLIE	LEGENDA SIGLE / LEGEND	40906-03.DWG	2	FOLLOWS
		380-415V 3P+N 50/60Hz	COD.DOC. 40906	N. ARCH. CI-40906-03	TOT. FOGLI	TOT. PAGE
				DATA EMISSIONE / DATE	2	2
				18/12/97		