


codice guasto	
n° 1 =	GUASTO SONDA BOILER n° 1 = PANNE SUR LES SONDAS DU BOILER n° 1 = BOILER PROBE BREAKDOWN n° 1 = BOILERSONDESTÖRUNG
n° 2 =	GUASTO SONDA VASCA n° 2 = PANNE SUR LES SONDAS DE LA CUVE n° 2 = TANK PROBE BREAKDOWN n° 2 = TANKSONDESTÖRUNG
n° 3 =	GARICO ACQUA GUASTO n° 3 = PANNE SUR LE CHARGEMENT H2O n° 3 = WATER LOAD FAILURE n° 3 = STÖRUNG DER WASSERLADUNG
n° 4 =	NO RISCALDAMENTO BOILER n° 4 = NO SUR LE CHAUFFAGE SURCHAUFFEUR n° 4 = NO HEATING BOILER FAILURE n° 4 = NO BOILERHEIZUNG
n° 5 =	NO RISCALDAMENTO VASCA n° 5 = NO PANNE SUR LE CHAUFFAGE CUVE n° 5 = NO HEATING TANK FAILURE n° 5 = NO TANKEHEIZUNG
n° 6 =	SOVRATEMPERATURA BOILER n° 6 = SOURTEMPERATURE SURCHAUFFEUR n° 6 = BOILER OVERTEMPERATURE n° 6 = BOILERÜBERTEMPERATUR
n° 7 =	SOVRATEMPERATURA VASCA n° 7 = SOURTEMPERATURE CUVE n° 7 = TANK OVERTEMPERATURE n° 7 = TANKEÜBERTEMPERATUR
n° 8 =	SCARICO ACQUA n° 8 = VIDANCE EAV n° 8 = WATER DRAIN n° 8 = WASSERABFLUB
n° 9 =	ALLARME PORTATA n° 9 = EXCES D'EAU n° 9 = DOOR ALLARM n° 9 = ZUVIEL WASSER
n° 10 =	MANCANZA FILTRO n° 10 = MANQUE DU FILTRE n° 10 = NO FILTERS n° 10 = MANGEL AN FILTRE

REV. 00	REV./DATE	IMPIANTO / INSTALLATION SCHEMA ELET.LAVASTOVIGLIE	TITOLO / TITLE SCHEMA FUNZIONALE / ELECTRICAL DIAGRAM	N. DIS. 42020-00 N. ARCH. CI42020-00	FOGLIO PAGE 1	SEGUE FOLLOWS 2
		220-240 V 1P+N 50/60Hz	COD.DOC. 42020	DATA EMISSIONE / DATE 26/03/04	TOT. FOGLI TOT. PAGE 2	

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	
A		C	=	CONDENSATORE	CONDENSER	CONDENSEUR	KONDENSATEUR										MARRONE	BROWN	MARON	BRAUN	
		PL	=	POMPA LAVAGGIO	WASCHPUMPE	POMPE LAVAGE	WASCHPUMPE											CELESTE	BLUE	BLEU-CLAIR	HELL BLAU
		DDE	=	DOSATORE DETERGENTE ELETTRICO	ELECTRIC DETERGENT PUMP	DOSEUR ELETRIQUE DETERGENT	DOSIERGERAT											NERO	BLACK	NOIR	SCHARZ
		PS	=	POMPA SCARICO	DRAIN PUMP	POMPE DE VIDANGE	LAUGENPUMPE											ROSSO	RED	ROUGE	ROT
		PAP	=	POMPA AUMENTO PRESSIONE	BOOSTER PUMP	SURPRESSEUR	DRUCKERHOHUNGSPUMPE (ALS ZUBEHOR)											VERDE	GREEN	VERT	GRUN
		ELC	=	ELETTROVALVOLA RISCIAQUO CALDO	RINSE HOT WATER SOLENOID VALVE	ELECTROSOUPAPE RINÇAGE CHAUD	WARMWASSER-MAGNETVENTIL											BIANCO	WHITE	BLANC	WEISS
		ELF	=	ELETTROVALVOLA RISCIAQUO FREDDO	RINSE COLD WATER SOLENOID VALVE	ELECTROSOUPAPE RINÇAGE FROID	KALTWASSER-MAGNETVENTIL											GRIGIO	GREY	GRIS	GRAU
		ELR	=	ELETTROVALVOLA RIGENERAZIONE	REGENERATION SOLENOID VALVE	ELECTROSOUPAPE REGENERATION	REGENERIERUNGSMAGNETVENTIL											ARANCIO	ORANGE	ORANGE	ORANGE
		ELCR	=	ELETTROVALVOLA CARICO	LOAD SOLENOID VALVE	ELECTROSOUPAPE CHARGEMENT	ZUFLUSS-MAGNETVENTIL											VIOLA	VIOLET	VIOLET	VIOLET
		ELSC	=	ELETTROVALVOLA SCARICO	DRAIN SOLENOID VALVE	ELECTROSOUPAPE VIDANGE	ENTLEERUNGSMAGNETVENTIL											BLU	BLEU	BLEU	BLAU
B		ST	=	SPIA TEMPERATURA	TEMPERATURE LIGHT	VOYANT TEMPERATURE	TEMPERATURSLEUCHTE														
		SC	=	SPIA CICLO	CYCLE LIGHT	VOYANT CYCLE	BETRIEBSLEUCHTE														
		SPR	=	SPIA RIGENERAZIONE	REGENERATION CYCLE LIGHT	VOYANT REGENERATION	REGENERIERUNGSLAUCHTE														
		SR	=	SPIA RETE	MAIN SWITCH LIGHT	VOYANT RESEAU ELECTRIQUE	NETZWRKSLEUCHTE														
		SA	=	SPIA ALLARME	ALARM WARNING LIGHT	VOYANT ALARME	ALARMANZEIGER														
		SV	=	SPIA VASCA	TANK LEVEL LIGHT	VOYANT NIVEAU CUVE	TANKWASSERNIVEAULAMPE														
		RB	=	RESISTENZA BOILER	BOILER HEATING ELEMENT	RESISTANCE SURCHAUFFEUR	BOILERHEIZUNG														
		RV	=	RESISTENZA VASCA	TANK HEATING ELEMENT	RESISTANCE CUVE	TANKHEIZUNG														
		IG	=	INTERRUTTORE GENERALE	MAIN SWITCH	INTERRUPTEUR GENERAL	HAUPTSCHALTER														
		IGD	=	INTERRUTTORE GENERALE STAND BY	STAND BY MAIN SWITCH	INTERUPTEUR GENERAL STAND BY	HAUPTSCHALTER STAND BY														
C		MPC	=	MICRO PORTA Contatto	DOOR SECURITY SWITCH	MICRO SECURITE PORTE	MIKROTÜRKONTAKT														
		MPM	=	MICRO PORTA Magnetico	MAGNETIC DOOR SECURITY SWITCH	MICRO SECURITE PORTE MAGNETIQUE	MAGNETISCHE SICHERHEITSMIKROTÜR														
		PPS	=	PULSANTE POMPA SCARICO	DRAIN PUMP SWITCH	BOUTON POMPE DE VIDANGE	ENTLEERUNGSPUMPE-SCHALTER														
		PR	=	PRESSOSTATO	PRESSURE SWITCH	PRESSOSTAT	DRUCKWACHTER														
		PC	=	PULSANTE CICLO	CYCLE SWITCH	BOUTON DEMARREUR	TASTSCHALTER F.PROGRAMMANFLAU														
		PCR	=	PULSANTE CICLO RIGENERAZIONE	REGENERATION CYCLE SWITCH	VOYANT REGENERATION	REGENERIERUNGSBETRIEBSLEUCHTE														
		PRF	=	PULSANTE RISCIAQUO FREDDO	RINSE COLD WATER SWITCH	BOUTON DE RINCAGE FROID	KALTESPUHLUNG SCHALTER														
		PCI	=	PULSANTE CICLO INFINITO	UNLIMITED CYCLE PUSH BUTTON	BOUTON CYCLE SANS ARRET	PAUSENLLOS ZYKLUSKNOPF														
		PPG	=	PULSANTE PROGRAMMAZIONE	PROGRAMMATION SWITCH	BOUTON PROGRAMMATION	PROGRAMMSCHALTER														
		DEVAM	=	DEV. AUTOMATICO/MANUALE	AUTOMATIC/MANUAL SWITCH	SELECTEUR AUTOMATIQUE/MANUAL	AUTOMATISCHER/MANUAL WAHLER														
D		DEVCF	=	DEV. RISCIAQUO CALDO/FREDDO	HOT/COLD RINSING SWITCH	COMM. DE RINCAGE CHAUD/FROID	UMSCHALTER F.KALT WARMWASSER														
		TSP	=	TERMOSTATO SICUREZZA POMPA	PUMP SECURITY THERMOSTAT	THERMOSTAT SECURITE POMPE	SICHERUNGSTHERMOSTAT DER PUMPE														
		TV	=	TERMOSTATO VASCA	TANK THERMOSTAT	THERMOSTAT CUVE	TANKTHERMOSTAT														
		TB	=	TERMOSTATO BOILER	BOILER THERMOSTAT	THERMOSTAT SURCHAUFFEUR	BOIERTHERMOSTAT														
		TS	=	TERMOSTATO SICUREZZA	SECURITY THERMOSTAT	THERMOSTAT DE SECURITE	SICHERHEITSTHERMOSTAT														
		MTz	=	TIMER CICLO	CYCLE TIMER	PROGRAMMATEUR DU CYCLE	ZYKLUSTIMER														
		MTzR	=	MOTORE TIMER RIGENERAZIONE	REGENERATION CYCLE MOTOR	MOTEUR DU RIGENERATION	SINCHRONMOT.F.REGENERIERUNGS TIMER														
		MTz(L)	=	MOTORE LENTO (MTz)	SLOW (MTz)	(MTz) LENT	LANGSAMER MOTOR														
		MTz(V)	=	MOTORE VELOCE (MTz)	FAST (MTz)	(MTz) RAPIDE	SCHNELLER MOTOR														
		MT5	=	CONTATTOR TIMER BOBINA	CONTACTOR TIMER	CONTACTEUR DU PROGRAMMATEUR	NT5 SCHALTERKONTAKT														
E		TLR	=	TELERUTTORE RESISTENZA	HEATING ELEMENT CONTACTOR	TELERUPTEUR RESISTANCE	HEIZUNGFERNSCHALTER-SCHÜTZ														
		TLPAP	=	TELERUTTORE PAP	BOOSTER PUMP CONTACTOR	TELERUPTEUR SURPRESSEUR	FERNSCHALTER-SCHÜTZ														
		TLP	=	TELERUTTORE POMPA	PUMP CONTACTOR	TELERUPTEUR POMPE	PUMPEFERNASCHALTER-SCHÜTZ														
		TLB	=	TELERUTTORE BOILER	BOILER CONTACTOR	TELERUPTEUR SURCHAUFFEUR	BOILERFERNASCHALTER-SCHÜTZ														
		TLV	=	TELERUTTORE VASCA	TANK CONTACTOR	TELERUPTEUR CUVE	TANKFERNASCHALTER-SCHÜTZ														
		RLn'	=	RELE'	RELAY	RELAIS	RELAIS														
		TPS	=	TIMER POMPA SCARICO	DRAIN PUMP TIMER	PROGRAMMATEUR POMPE DE VIDAGE	LAUGENPUMPE TIMER														
		RM	=	RELE' TERMICO	THERMIC RELAY	RELAIS TERMIQUE	THERMISCH RELAIS														
		BL	=	BLOCCO PORTA	DOOR LOCK	SERRAGE PORTE	TÜRSPERRE														
		ELBT	=	ELETTROVALVOLA BREAK TANK	BREAK TANK SOLENOID VALVE	ELECTROSOUPAPE DU SYSTEME ANTI RETOUR	BREAK TANK SYSTEM MAGNETVENTIL														
F		PRBT	=	PRESSOSTATO BREAK TANK	BREAK TANK PRESSURE SWITCH	PRESSOSTAT DU SYSTEME ANTI RETOUR	BREAK TANK SYSTEM DRUCKWACHTER														
		PLIFT	=	POMPA LIFT	LIFT PUMP	POMPE SYSTEME RELEVAGE CAPOT	LIFT PUMPE														
		ELLF	=	ELETTROVALVOLA LIFT	LIFT SOLENOID VALVE	ELECTROSOUPAPE SYSTEME RELEVAGE CAPOT	LIFT SYSTEM MAGNETVENTIL														
		PRLF	=	PRESSOSTATO LIFT	LIFT PRESSURE SWITCH	PRESSOSTAT SYSTEME RELEVAGE CAPOT	LIFT SYSTEM DRUCKWACHTER														

MARRONE	BROWN	MARON	BRAUN
CELESTE	BLUE	BLEU-CLAIR	HELL BLAU
NERO	BLACK	NOIR	SCHARZ
ROSSO	RED	ROUGE	ROT
VERDE	GREEN	VERT	GRUN
BIANCO	WHITE	BLANC	WEISS
GRIGIO	GREY	GRIS	GRAU
ARANCIO	ORANGE	ORANGE	ORANGE
VIOLA	VIOLET	VIOLET	VIOLET
BLU	BLEU	BLEU	BLAU

REV. 00	REV./DATE	IMPIANTO / INSTALLATION				TITOLO / TITLE		N. DIS. 42020-00 N. ARCH. CI-42020-00 DATA EMISSIONE / DATE 26/03/04	FOGLIO PAGE 1 SEQUE FOLLOWS 2 TOT. FOGLI TOT. PAGE 2
		SCHEMA ELET.LAVASTOVIGLIE				LEGENDA SIGLE / LEGEND			
		220-240 V	1P+N	50/60Hz		COD.DOC.	42020		

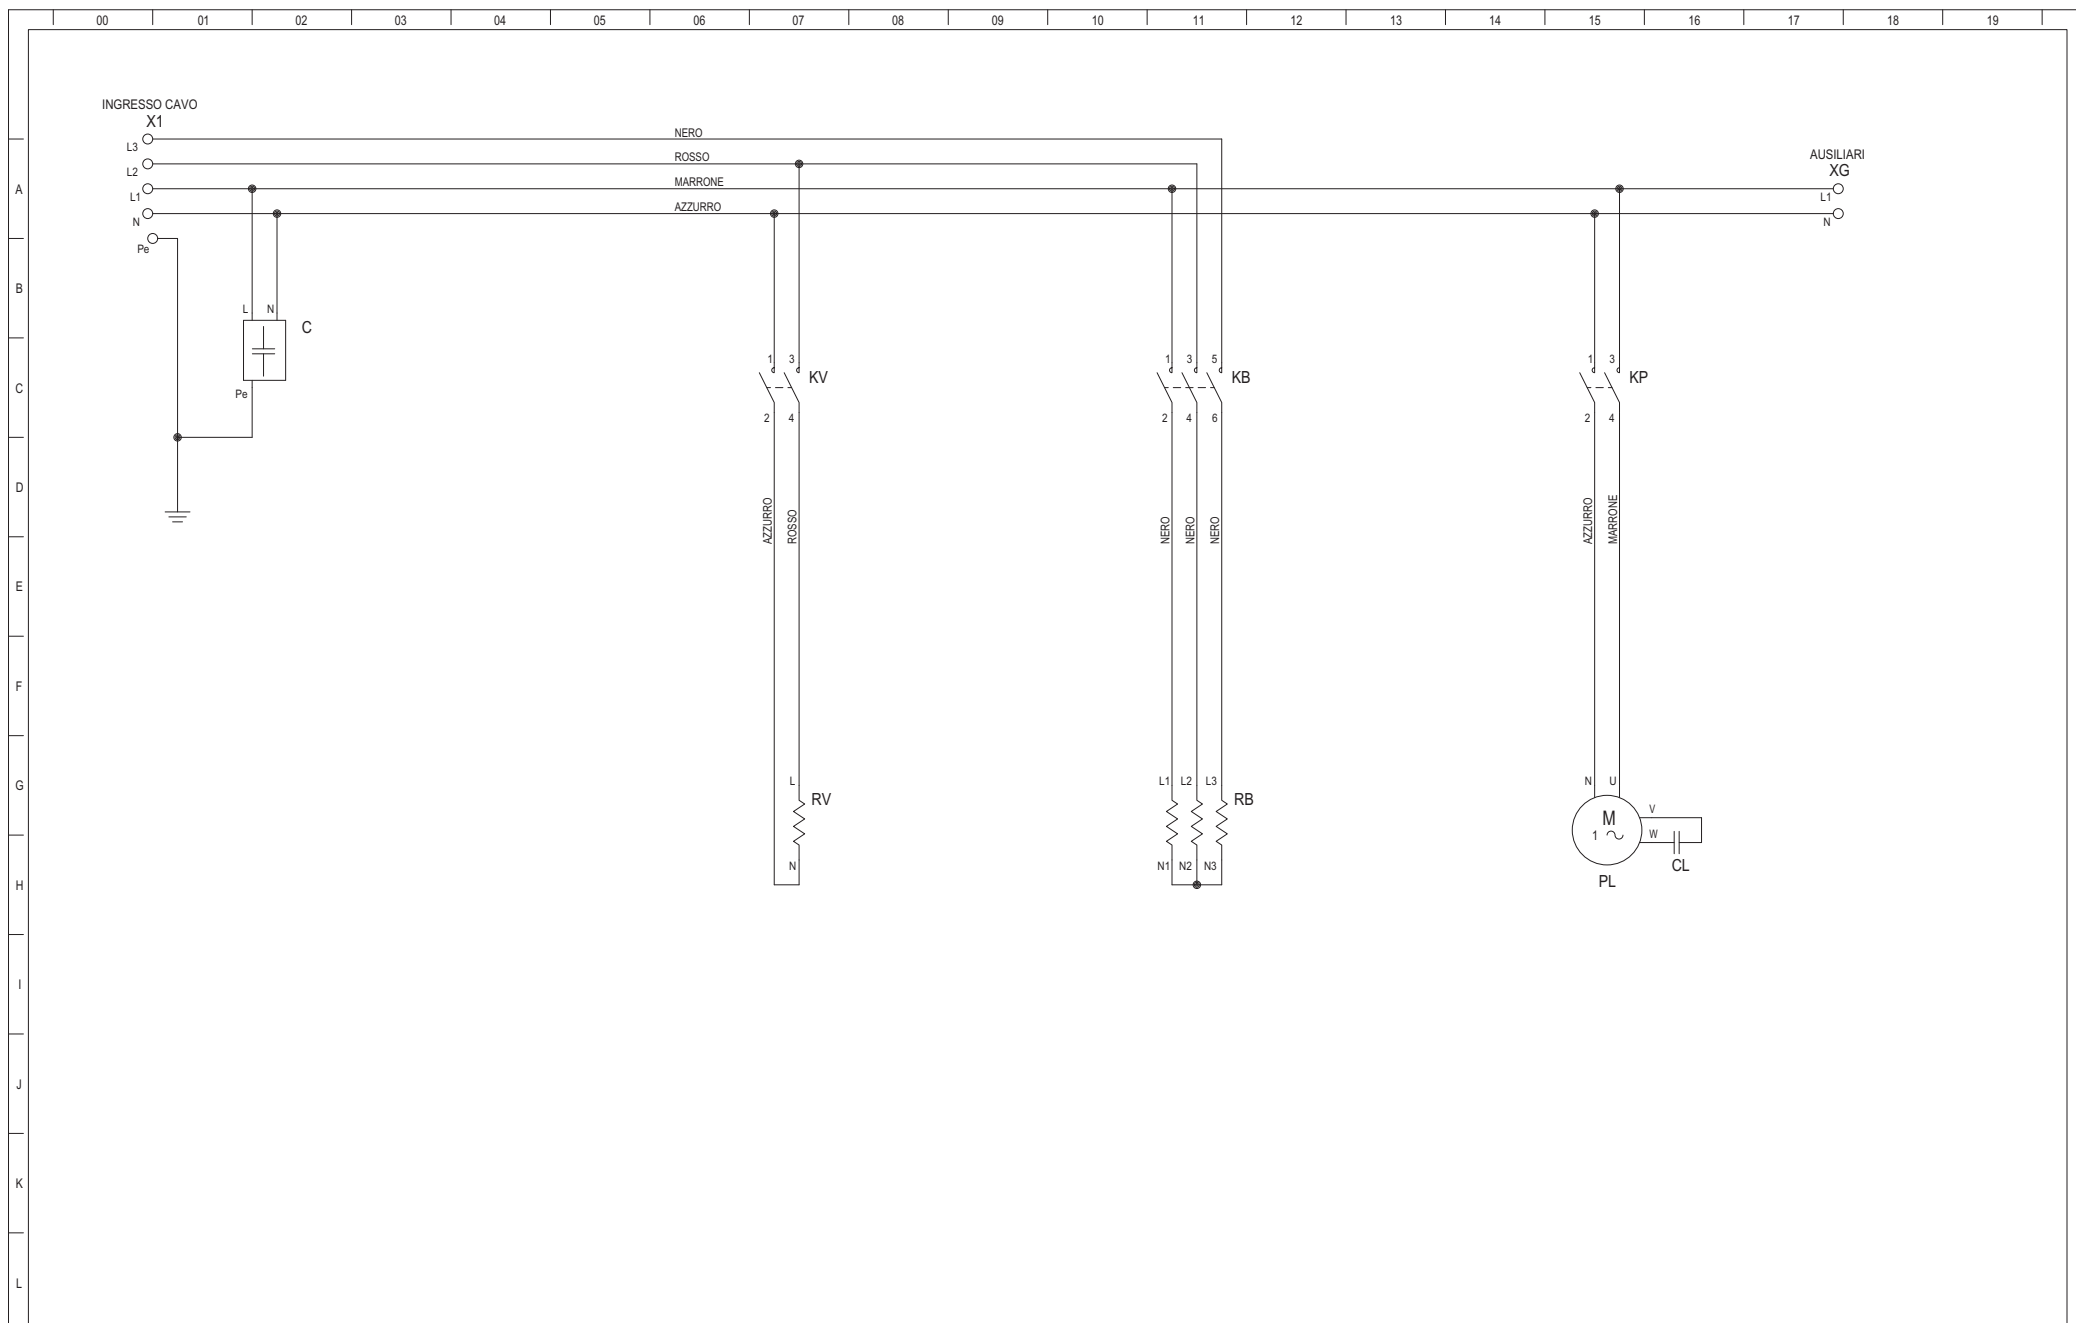

REV. 00	REV./DATE	IMPIANTO / INSTALLATION			TITOLO / TITLE		N. DIS. 42021-00.DWG		FOGLIO PAGE 1		SEGUE FOLLOWS 2	
		SCHEMA ELET.LAVASTOVIGLIE			SCHEMA DI POTENZA / POWER ELECTRICAL DIAGRAM		N. ARCH. CI-42021-00		DATA EMISSIONE / DATE		TOT. FOGLI TOT. PAGE	
		380-415V	3P+N	50/60Hz	COD.DOC. 42021		26/03/04		2			

00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	
A		C =	CONDENSATORE	CONDENSER	CONDENSEUR	KONDENSATEUR										MARRONE	BROWN	MARON	BRAUN	
		PL =	POMPA LAVAGGIO	WASCHPUMPE	POMPE LAVAGE	WASCHPUMPE										CELESTE	BLUE	BLEU-CLAIR	HELL BLAU	
		DDE =	DOSATORE DETERSIVO ELETTRICO	ELECTRIC DETERGENT PUMP	DOSEUR ELETRIQUE DETERGENT	DOSIERGERAT										NERO	BLACK	NOIR	SCHARZ	
		PS =	POMPA SCARICO	DRAIN PUMP	POMPE DE VIDANGE	LAUGENPUMPE										ROSSO	RED	ROUGE	ROT	
		PAP =	POMPA AUMENTO PRESSIONE	BOOSTER PUMP	SURPRESSEUR	DRUCKERHOHUNGSPUMPE (ALS ZUBEHÖR)										VERDE	GREEN	VERT	GRÜN	
		ELC =	ELETTROVALVOLA RISCIAQUO CALDO	RINSE HOT WATER SOLENOID VALVE	ELECTROSOUAPE RINÇAGE CHAUD	WARMWASSER-MAGNETVENTIL										BIANCO	WHITE	BLANC	WEISS	
		ELF =	ELETTROVALVOLA RISCIAQUO FREDDO	RINSE COLD WATER SOLENOID VALVE	ELECTROSOUAPE RINÇAGE FROID	KALTWASSER-MAGNETVENTIL										GRIGIO	GREY	GRIS	GRAU	
		ELR =	ELETTROVALVOLA RIGENERAZIONE	REGENERATION SOLENOID VALVE	ELECTROSOUAPE REGENERATION	REGENERIERUNGSMAGNETVENTIL										ARANCIO	ORANGE	ORANGE	ORANGE	
		ELCR =	ELETTROVALVOLA CARICO	LOAD SOLENOID VALVE	ELECTROSOUAPE CHARGEMENT	ZUFUSS-MAGNETVENTIL										VIOLA	VIOLET	VIOLET	VIOLET	
		ELSC =	ELETTROVALVOLA SCARICO	DRAIN SOLENOID VALVE	ELECTROSOUAPE VIDANGE	ENTLEERUNGSMAGNETVENTIL										BLU	BLEU	BLEU	BLAU	
B		ST =	SPIA TEMPERATURA	TEMPERATURE LIGHT	VOYANT TEMPERATURE	TEMPERATURSLEUCHTE														
		SC =	SPIA CICLO	CYCLE LIGHT	VOYANT CYCLE	BETRIEBSLEUCHTE														
		SPR =	SPIA RIGENERAZIONE	REGENERATION CYCLE LIGHT	VOYANT REGENERATION	REGENERIERUNGSLUCHTE														
		SR =	SPIA RETE	MAIN SWITCH LIGHT	VOYANT RESEAU ELECTRIQUE	NETZWERKSLEUCHTE														
		SA =	SPIA ALLARME	ALARM WARNING LIGHT	VOYANT ALARME	ALARM-ANZEIGER														
		SV =	SPIA VASCA	TANK LEVEL LIGHT	VOYANT NIVEAU CUVE	TANKWASSERNIVEAULAMPE														
		RB =	RESISTENZA BOILER	BOILER HEATING ELEMENT	RESISTANCE SURCHAUFFEUR	BOILERHEIZUNG														
		RV =	RESISTENZA VASCA	TANK HEATING ELEMENT	RESISTANCE CUVE	TANKHEIZUNG														
		IG =	INTERRUTTORE GENERALE	MAIN SWITCH	INTERRUPTEUR GENERAL	HAUPTSCHALTER														
		IGD =	INTERRUTTORE GENERALE STAND BY	STAND BY MAIN SWITCH	INTERUPTEUR GENERAL STAND BY	HAUPTSCHALTER STAND BY														
C		MP =	MICRO PORTA Contatto	DOOR SECURITY SWITCH	MICRO SECURITE PORTE	MIKROTÜRCONTACT														
		MPM =	MICRO PORTA Magnetico	MAGNETIC DOOR SECURITY SWITCH	MICRO SECURITE PORTE MAGNETIQUE	MAGNETISCHE SICHERHEITSMIKROTÜR														
		PPS =	PULSANTE POMPA SCARICO	DRAIN PUMP SWITCH	BOUTON POMPE DE VIDANGE	ENTLEERUNGSPUMPE-SCHALTER														
		PR =	PRESSOSTATO	PRESSURE SWITCH	PRESSOSTAT	DRUCKWÄCHTER														
		PC =	PULSANTE CICLO	CYCLE SWITCH	BOUTON DEMARREUR	TASTSCHALTER F.PROGRAMMANFLAU														
		PCR =	PULSANTE CICLO RIGENERAZIONE	REGENERATION CYCLE SWITCH	VOYANT REGENERATION	REGENERIERUNGSBETRIEBSLEUCHTE														
		PRF =	PULSANTE RISCIAQUO FREDDO	RINSE COLD WATER SWITCH	BOUTON DE RINCAGE FROID	KALTESPUHLUNG SCHALTER														
		PCI =	PULSANTE CICLO INFINITO	UNLIMITED CYCLE PUSH BUTTON	BOUTON CYCLE SANS ARRET	PAUSENLOS ZYKLUSKNOPF														
		PPG =	PULSANTE PROGRAMMAZIONE	PROGRAMMATION SWITCH	BOUTON PROGRAMMATION	PROGRAMMSCHALTER														
		DEVA/M =	DEV. AUTOMATICO/MANUALE	AUTOMATIC/MANUAL SWITCH	SELECTEUR AUTOMATIQUE/MANUAL	AUTOMATISCHER/MANUAL WAHLER														
D		DEVCF =	DEV. RISCIAQUO CALDO/FREDDO	HOT/COLD RINSING SWITCH	COMM. DE RINCAGE CHAUD/FROID	UMSCHALTER F.KALT WARMWASSER														
		TSP =	TERMOSTATO SICUREZZA POMPA	PUMP SECURITY THERMOSTAT	THERMOSTAT SECURITE POMPE	SICHERUNGSTHERMOSTAT DER PUMPE														
		TV =	TERMOSTATO VASCA	TANK THERMOSTAT	THERMOSTAT CUVE	TANKTHERMOSTAT														
		TB =	TERMOSTATO BOILER	BOILER THERMOSTAT	THERMOSTAT SURCHAUFFEUR	BOIERTHERMOSTAT														
		TS =	TERMOSTATO SICUREZZA	SECURITY THERMOSTAT	THERMOSTAT DE SECURITE	SICHERHEITSTHERMOSTAT														
		MTz =	TIMER CICLO	CYCLE TIMER	PROGRAMMATEUR DU CYCLE	ZYKLUSTIMER														
		MTzR =	MOTORE TIMER RIGENERAZIONE	REGENERATION CYCLE MOTOR	MOTEUR DU RIGENERATION	SINCHRONMOT.F.REGENERIERUNGS TIMER														
		MTz(L) =	MOTORE LENTO (MTz)	SLOW (MTz)	(MTz) LENT	LANGSAMER MOTOR														
		MTz(V) =	MOTORE VELOCE (MTz)	FAST (MTz)	(MTz) RAPIDE	SCHNELLER MOTOR														
		MT5 =	CONTATTOR TIMER BOBINA	CONTACTOR TIMER	CONTACTEUR DU PROGRAMMATEUR	NTS SCHALTERCONTACT														
E		TLR =	TELERUTTORE RESISTENZA	HEATING ELEMENT CONTACTOR	TELERUPTEUR RESISTANCE	HEIZUNGFERNSCHALTER-SCHÜTZ														
		TLPAP =	TELERUTTORE PAP	BOOSTER PUMP CONTACTOR	TELERUPTEUR SURPRESSEUR	FERNSCHALTER-SCHÜTZ														
		KP =	TELERUTTORE POMPA	PUMP CONTACTOR	TELERUPTEUR POMPE	PUMPEFERNASCHALTER-SCHÜTZ														
		KB =	TELERUTTORE BOILER	BOILER CONTACTOR	TELERUPTEUR SURCHAUFFEUR	BOILERFERNASCHALTER-SCHÜTZ														
		KV =	TELERUTTORE VASCA	TANK CONTACTOR	TELERUPTEUR CUVE	TANKFERNASCHALTER-SCHÜTZ														
		RLn° =	RELE°	RELAY	RELAIS	RELAIS														
		TPS =	TIMER POMPA SCARICO	DRAIN PUMP TIMER	PROGRAMMATEUR POMPE DE VIDAGE	LAUGENPUMPE TIMER														
		RM =	RELE° TERMICO	THERMIC RELAY	RELAIS TERMIQUE	THERMISCH RELAIS														
		BL =	BLOCCO PORTA	DOOR LOCK	SERRAGE PORTE	TÜRRSPERRE														
		ELBT =	ELETTROVALVOLA BREAK TANK	BREAK TANK SOLENOID VALVE	ELECTROSOUAPE DU SYSTEME ANTI RETOUR	BREAK TANK SYSTEM MAGNETVENTIL														
F		PRBT =	PRESSOSTATO BREAK TANK	BREAK TANK PRESSURE SWITCH	PRESSOSTAT DU SYSTEME ANTI RETOUR	BREAK TANK SYSTEM DRUCKWÄCHTER														
		PLIFT =	POMPA LIFT	LIFT PUMP	POMPE SYSTEME RELEVAGE CAPOT	LIFT PUMPE														
		ELLF =	ELETTROVALVOLA LIFT	LIFT SOLENOID VALVE	ELECTROSOUAPE SYSTEME RELEVAGE CAPOT	LIFT SYSTEM MAGNETVENTIL														
		PRLF =	PRESSOSTATO LIFT	LIFT PRESSURE SWITCH	PRESSOSTAT SYSTEME RELEVAGE CAPOT	LIFT SYSTEM DRUCKWÄCHTER														
	G																			

MARRONE	BROWN	MARON	BRAUN
CELESTE	BLUE	BLEU-CLAIR	HELL BLAU
NERO	BLACK	NOIR	SCHARZ
ROSSO	RED	ROUGE	ROT
VERDE	GREEN	VERT	GRÜN
BIANCO	WHITE	BLANC	WEISS
GRIGIO	GREY	GRIS	GRAU
ARANCIO	ORANGE	ORANGE	ORANGE
VIOLA	VIOLET	VIOLET	VIOLET
BLU	BLEU	BLEU	BLAU

REV.	REV./DATE	IMPIANTO / INSTALLATION	TITOLO / TITLE	N. DIS. 42922-00	FOGLIO PAGE	SEGUE FOLLOWS
00		SCHEMA ELET.LAVASTOVIGLIE	LEGENDA SIGLE / LEGEND	N. ARCH. CI-42922-00	1	2
		220-240 V 1P+N 50/60Hz	COD.DOC. 42021	DATA EMISSIONE / DATE 26/03/04	TOT. FOGLI TOT. PAGE	2