




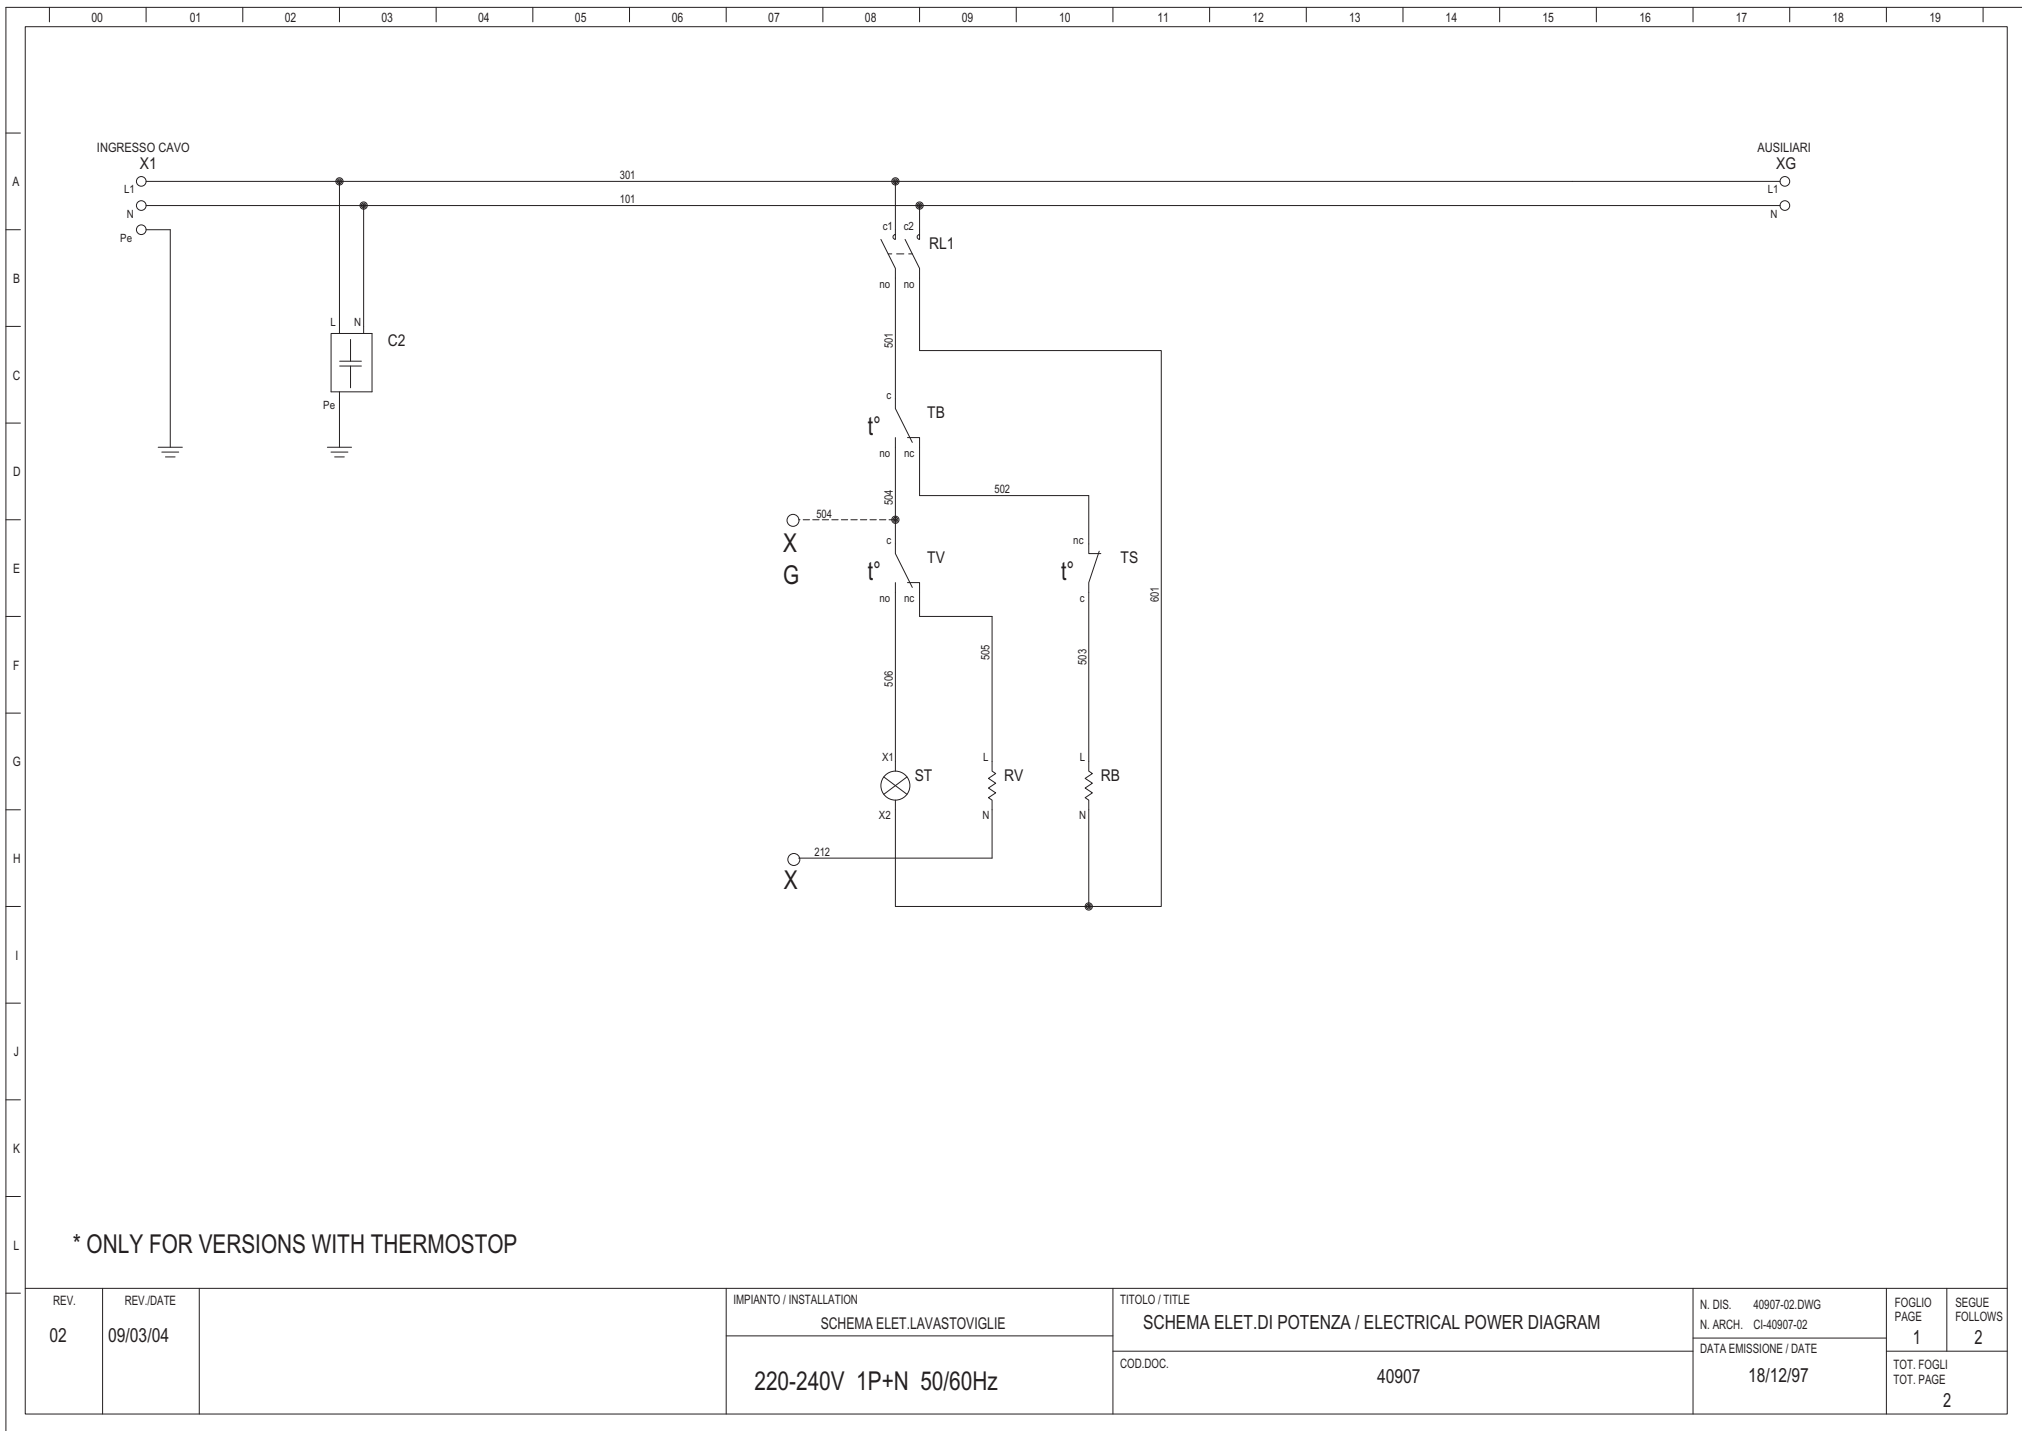

* ONLY FOR VERSIONS WITH THERMOSTOP

REV. 02	REV./DATE 09/03/04	IMPIANTO / INSTALLATION SCHEMA ELET.LAVASTOVIGLIE	TITOLO / TITLE SCHEMA ELET.DI POTENZA / ELECTRICAL POWER DIAGRAM	N. DIS. 40907-02.DWG N. ARCH. CI-40907-02	FOGLIO PAGE 1	SEQUE FOLLOWS 2
		220-240V 1P+N 50/60Hz	COD.DOC. 40907	DATA EMISSIONE / DATE 18/12/97	TOT. FOGLI TOT. PAGE 2	

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19																																							
A		C	=	CONDENSATORE		CONDENSER		CONDENSEUR		KONDENSATEUR		<table><tr><td>MARRONE</td><td>BROWN</td><td>MARON</td><td>BRAUN</td></tr><tr><td>CELESTE</td><td>BLUE</td><td>BLEU-CLAIR</td><td>HELL BLAU</td></tr><tr><td>NERO</td><td>BLACK</td><td>NOIR</td><td>SCHARZ</td></tr><tr><td>ROSSO</td><td>RED</td><td>ROUGE</td><td>ROT</td></tr><tr><td>VERDE</td><td>GREEN</td><td>VERT</td><td>GRÜN</td></tr><tr><td>BIANCO</td><td>WHITE</td><td>BLANC</td><td>WEISS</td></tr><tr><td>GRIGIO</td><td>GREY</td><td>GRIS</td><td>GRAU</td></tr><tr><td>ARANCIO</td><td>ORANGE</td><td>ORANGE</td><td>ORANGE</td></tr><tr><td>VIOLA</td><td>VIOLET</td><td>VIOLET</td><td>VIOLET</td></tr><tr><td>BLU</td><td>BLEU</td><td>BLEU</td><td>BLAU</td></tr></table>								MARRONE	BROWN	MARON	BRAUN	CELESTE	BLUE	BLEU-CLAIR	HELL BLAU	NERO	BLACK	NOIR	SCHARZ	ROSSO	RED	ROUGE	ROT	VERDE	GREEN	VERT	GRÜN	BIANCO	WHITE	BLANC	WEISS	GRIGIO	GREY	GRIS	GRAU	ARANCIO	ORANGE	ORANGE	ORANGE	VIOLA	VIOLET	VIOLET	VIOLET	BLU	BLEU	BLEU	BLAU
	MARRONE	BROWN	MARON	BRAUN																																																							
	CELESTE	BLUE	BLEU-CLAIR	HELL BLAU																																																							
	NERO	BLACK	NOIR	SCHARZ																																																							
	ROSSO	RED	ROUGE	ROT																																																							
	VERDE	GREEN	VERT	GRÜN																																																							
	BIANCO	WHITE	BLANC	WEISS																																																							
	GRIGIO	GREY	GRIS	GRAU																																																							
	ARANCIO	ORANGE	ORANGE	ORANGE																																																							
	VIOLA	VIOLET	VIOLET	VIOLET																																																							
BLU	BLEU	BLEU	BLAU																																																								
	PL	=	POMPA LAVAGGIO		WASH PUMP		POMPE LAVAGE		WASCHPUMPE																																																		
	DDE	=	DOSATORE DETERGIVO ELETTRICO		ELECTRIC DETERGENT PUMP		DOSEUR ELETRIQUE DETERGENT		DOSIERGERÄT																																																		
	PS	=	POMPA SCARICO		DRAIN PUMP		POMPE DE VIDANGE		LAUGENPUMPE																																																		
	PAP	=	POMPA AUMENTO PRESSIONE		BOOSTER PUMP		SURPRESSEUR		DRUCKERHOHUNGSPUMPE (ALS ZUBEHÖR)																																																		
	ELC	=	ELETTROVALVOLA RISCIAQUO CALDO		RINSE HOT WATER SOLENOID VALVE		ELECTROSOUPAPE RINÇAGE CHAUD		WARMWASSER-MAGNETVENTIL																																																		
	ELF	=	ELETTROVALVOLA RISCIAQUO FREDDO		RINSE COLD WATER SOLENOID VALVE		ELECTROSOUPAPE RINÇAGE FROID		KALTWASSER-MAGNETVENTIL																																																		
	ELR	=	ELETTROVALVOLA RIGENERAZIONE		REGENERATION SOLENOID VALVE		ELECTROSOUPAPE REGENERATION		REGENERIERUNGSMAGNETVENTIL																																																		
	ELCR	=	ELETTROVALVOLA CARICO		LOAD SOLENOID VALVE		ELECTROSOUPAPE CHARGEMENT		ZUFLUSS-MAGNETVENTIL																																																		
	ELSC	=	ELETTROVALVOLA SCARICO		DRAIN SOLENOID VALVE		ELECTROSOUPAPE VIDANGE		ENTLEERUNGSMAGNETVENTIL																																																		
B		ST	=	SPIA TEMPERATURA		TEMPERATURE LIGHT		VOYANT TEMPERATURE		TEMPERATURSLEUCHTE																																																	
		SC	=	SPIA CICLO		CYCLE LIGHT		VOYANT CYCLE		BETRIEBSLEUCHTE																																																	
		SPR	=	SPIA RIGENERAZIONE		REGENERATION CYCLE LIGHT		VOYANT REGENERATION		REGENERIERUNGSLEUCHTE																																																	
		SR	=	SPIA RETE		MAIN SWITCH LIGHT		VOYANT RESEAU ELECTRIQUE		NETZEWKRSLEUCHTE																																																	
		SA	=	SPIA ALLARME		ALARM WARNING LIGHT		VOYANT ALARME		ALARM-ANZEIGER																																																	
		SV	=	SPIA VASCA		TANK LEVEL LIGHT		VOYANT NIVEAU CUVE		TANKWASSERNIVEAULAMPE																																																	
		RB	=	RESISTENZA BOILER		BOILER HEATING ELEMENT		RESISTANCE SURCHAUFFEUR		BOILERHEIZUNG																																																	
		RV	=	RESISTENZA VASCA		TANK HEATING ELEMENT		RESISTANCE CUVE		TANKHEIZUNG																																																	
		IG	=	INTERRUTTORE GENERALE		MAIN SWITCH		INTERRUPTEUR GENERAL		HAUPTSCHALTER																																																	
		IGD	=	INTERRUTTORE GENERALE STAND BY		STAND BY MAIN SWITCH		INTERUPTEUR GENERAL STAND BY		HAUPTSCHALTER STAND BY																																																	
C		MP	=	MICRO PORTA Contatto		DOOR SECURITY SWITCH		MICRO SECURITE PORTE		MIKROTÜRCONTACT																																																	
		MPM	=	MICRO PORTA Magnetico		MAGNETIC DOOR SECURITY SWITCH		MICRO SECURITE PORTE MAGNETIQUE		MAGNETISCHE SICHERHEITSMIKROTÜR																																																	
		PPS	=	PULSANTE POMPA SCARICO		DRAIN PUMP SWITCH		BOUTON POMPE DE VIDANGE		ENTLEERUNGSPUMPE-SCHALTER																																																	
		PR	=	PRESSOSTATO		PRESSURE SWITCH		PRESSOSTAT		DRUCKWÄCHTER																																																	
		PC	=	PULSANTE CICLO		CYCLE SWITCH		BOUTON DEMARREUR		TASTSCHALTER F.PROGRAMMANFLAU																																																	
		PCR	=	PULSANTE CICLO RIGENERAZIONE		REGENERATION CYCLE SWITCH		VOYANT REGENERATION		REGENERIERUNGSBETRIEBSLEUCHTE																																																	
		PRF	=	PULSANTE RISCIAQUO FREDDO		RINSE COLD WATER SWITCH		BOUTON DE RINÇAGE FROID		KALTESPUHLUNG SCHALTER																																																	
		PCI	=	PULSANTE CICLO INFINITO		UNLIMITED CYCLE PUSH BUTTON		BOUTON CYCLE SANS ARRET		PAUSENLOS ZYKLUSKNOPF																																																	
		PPG	=	PULSANTE PROGRAMMAZIONE		PROGRAMMATION SWITCH		BOUTON PROGRAMMATION		PROGRAMMSCHALTER																																																	
		DEVAM	=	DEV. AUTOMATICO/MANUALE		AUTOMATIC/MANUAL SWITCH		SELECTEUR AUTOMATIQUE/MANUAL		AUTOMATISCHER/MANUAL WAHLER																																																	
D		DEVCF	=	DEV. RISCIAQUO CALDO/FREDDO		HOT/COLD RINSING SWITCH		COMM. DE RINÇAGE CHAUD/FROID		UMSCHALTER F.KALT WARMWASSER																																																	
		TSP	=	TERMOSTATO SICUREZZA POMPA		PUMP SECURITY THERMOSTAT		THERMOSTAT SECURITE POMPE		SICHERUNGSTERMOSTAT DER PUMPE																																																	
		TV	=	TERMOSTATO VASCA		TANK THERMOSTAT		THERMOSTAT CUVE		TANKTHERMOSTAT																																																	
		TB	=	TERMOSTATO BOILER		BOILER THERMOSTAT		THERMOSTAT SURCHAUFFEUR		BOIERTHERMOSTAT																																																	
		TS	=	TERMOSTATO SICUREZZA		SECURITY THERMOSTAT		THERMOSTAT DE SECURITE		SICHERHEITSTHERMOSTAT																																																	
		MT2	=	TIMER CICLO		CYCLE TIMER		PROGRAMMATEUR DU CYCLE		ZYKLUSTIMER																																																	
		MT2R	=	MOTORE TIMER RIGENERAZIONE		REGENERATION CYCLE MOTOR		MOTEUR DU RIGENERATION		SINCHRONMOT.F.REGENERIERUNGS TIMER																																																	
		MT2(L)	=	MOTORE LENTO (MT2)		SLOW (MT2)		(MT2) LENT		LANGSAMER MOTOR																																																	
		MT2(V)	=	MOTORE VELOCE (MT2)		FAST (MT2)		(MT2) RAPIDE		SCHNELLER MOTOR																																																	
E		MT5	=	CONTATTORE TIMER BOBINA		CONTACTOR TIMER		CONTACTEUR DU PROGRAMMATEUR		NT5 SCHALTERKONTAKT																																																	
		TLR	=	TELERUTTORE RESISTENZA		HEATING ELEMENT CONTACTOR		TELERUPTEUR RESISTANCE		HEIZUNGFERNSCHALTER-SCHÜTZ																																																	
		TLPAP	=	TELERUTTORE PAP		BOOSTER PUMP CONTACTOR		TELERUPTEUR SURPRESSEUR		FERNSCHALTER-SCHÜTZ																																																	
		TLP	=	TELERUTTORE POMPA		PUMP CONTACTOR		TELERUPTEUR POMPE		PUMPEFERNASCHALTER-SCHÜTZ																																																	
		TLB	=	TELERUTTORE BOILER		BOILER CONTACTOR		TELERUPTEUR SURCHAUFFEUR		BOILERFERNASCHALTER-SCHÜTZ																																																	
		TLV	=	TELERUTTORE VASCA		TANK CONTACTOR		TELERUPTEUR CUVE		TANKFERNASCHALTER-SCHÜTZ																																																	
		RLn°	=	RELE'		RELAY		RELAIS		RELAIS																																																	
		TPS	=	TIMER POMPA SCARICO		DRAIN PUMP TIMER		PROGRAMMATEUR POMPE DE VIDAGE		LAUGENPUMPE TIMER																																																	
		RM	=	RELE' TERMICO		THERMIC RELAY		RELAIS TERMIQUE		THERMISCH RELAIS																																																	
		BL	=	BLOCCO PORTA		DOOR LOCK		SERRAGE PORTE		TÜRRSPERRE																																																	
F																																																											
G																																																											
H																																																											
I																																																											
J																																																											
K																																																											
L																																																											

<